

User Manual for D808(F)

Introduction of the features:

Four in one lock: card, password, fingerprint and mechanical key

Card type: MFI

Support dual verification

Password is 6-10 digits.

Capacity for card/password/fingerprint: 100

Password protection: enter any digits(at most 20) before the right password.

Low battery indicating

Touch screen wakeup: Touch the keypad area

In programming, "*" is back button, "W" is confirm button.

Initial/factory password: 090723

Reset



1. Initialization

Power off

Press the reset button on main board of the front lock and keep it still

Power on, release the reset button till you hear 'di' sound

Press the reset button for 4 times, you will hear 'Initializing', it's done when you hear 'Initializing succeed'.

2. Change initial password(admin password)

(In factory state, the initial password is the admin password)

Touch the keypad to light on

Enter 0 and press

Enter initial password(090723a) and press g, you will hear voice prompt for menu list: 1 programming 2 deleting 3.change password 4 voice regulating 5.dual verification 6.set time 7.check record 8.RF device

Press '3', then enter initial password and press #

Enter new admin password and press ti

Enter new admin password again and press N, Done

3. Programming

Touch the keypad to light on

Enter 0 and press

Enter admin password and press you will hear voice prompt for menu list:

1.programming 2.deleng 3 -change password 4,voice regulating

5.dual verification 6,set time 7.check record 8.RF device

Press '1' and you will hear 'The serial number Please input the password, card or fingerprint' (The serial number is given in order automatically)

A. Program password

1.enter a password and press # 2,enter the password again and press

B. Program card: swipe a card on keypad area. Done

C. Program fingerprint: read fingerprint 2 times. Done

Note: Press '0' for continuous programming, press other buttons to exit.

4. Deleting

Touch the keypad to light on

Enter 0 and press

Enter admin password and press it, you will hear voice prompt for menu list:

1.programming 2,deleting 3.change password 4.voice regulating

5.dual verification 6.set time 7.check record 8,RF device

Press '2' and you will hear voice prompt as following: 1.delete by serial number 2.clear cards 3 clear passwords 4,clear fingerprints 5. Delete all

A, Press '1' to delete by 'oerialn umber(ontort he serial number in 2 digits)

B, Press '2' to clear all cards

C, Press 'J' to clear all passwords

D. Press '4' to clear all fingerprints

E, Press to delete all of them

5. Voice regulating

Touch the keypad to light on

Enter 0 and press II

Enter admin password and press It, you will hear voice prompt for menu list:

1,programming 2.deleting 3 Change password 4,voice regulating

5,dual verification 6,set time 7check record 8.RF device

Press '4' and you will hear voice prompt as following:

1.Low 2,Mcidium 3,High

A, Press '1' for low voice

B. Press '2' for medium voice

C, Press '3' for high voice

6. Dual verification

Touch the keypad to light on

Enter 0 and press If

Enter admin password and press 'I, you will hear voice prompt for menu list:

1,programming 2,deleting 3,change password 4,voice regulating

5,dual verification 6.set time 7,check record 8 RF device

Press '5' and you will hoar voicc prompt as following:

1, enter dual verification 2, cancel dual verification

A, Press '1' to enter dual verification

B, Press '2' to cancel dual verification

Note: In dual verification mode, only two combined users can open except for admin password.

7. Set time

Enter the menu list as above

Press '6'

Enter the time according to voice prompt, (cg:2016/12/01 15:08)

Note: Year range: 2000-2099, month range:01-12, day range:01-31,

hour range:00-23,m inute range:00-59

8- Check record

Enter the menu list as above

will report the latest record

Note: Press # for next record, press * for last record

9. RF device

Enter the menu list as above

'3' one time

2 buttons on remote at the same time

10- Normally open mode

ZZ-Enter normaliy open mode

by any unlocking way

and '3' in 4 seconds, it entered normally open mode

22—Canæl normally open mode

you open by any unlocking way, normally open mode is cancelled